



## SWAP<sup>®</sup> VALVE

Installation and Operating Instructions

Applies to SPV8-A-A, SPV8-L-A, SPV16-A-A, SPV16-L-A

### General

The Smartflow SWAP Valve is a simple, manually selectable device that supplies cooling water to the mold during processing or air to purge the water from the mold before a mold change.

The SWAP valve has three positions: WATER, PURGE and VENT. the WATER position is selected for normal processing. The PURGE position is selected to evacuate the water before mold change. The VENT position is selected to bleed-off trapped pressure and drain residual water before a mold change.

An optional spring-loaded locking pin is available to prevent accidental movement of the selector handle.

### Assembly (as required)

1. Apply thread locking compound (Loctite 638 or equivalent) to threaded end of valve handle. Screw valve handle into center disk threaded hole. See figure 1.
2. Install mounting brackets (included) into desired hole locations using included mounting screws.
3. Thread manual vent into the hole as shown in figure 1. (No additional thread sealant is required.)

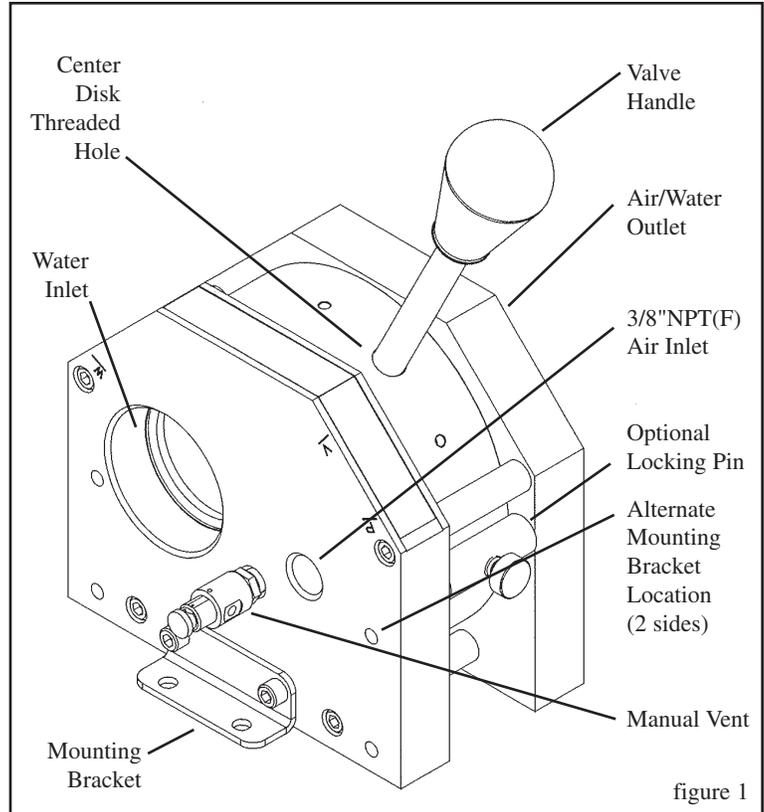


figure 1

### Protection from Galvanic Corrosion in Water Circulating Systems

The SWAP Valve is manufactured of 6061-T6 aluminum with a hard anodize/Teflon<sup>®</sup> coating. While the coating affords a considerable degree of protection from galvanic action, our tests have shown that if copper based alloys (brass) fittings are attached directly to the SWAP Valve, there is a high probability that galvanic corrosion will occur inside the valve.

Galvanic action can be reduced or prevented by breaking the path of electrical conductivity through the plumbing system. We strongly recommend that connections to the SWAP Valve are made with plastic pipe fittings or with a dielectric fitting that will insulate the SWAP Valve from other metal piping. Dielectric fittings may be purchased directly from Smartflow or your local plumbing supply company.

**burger & brown engineering, inc.**

4500 E 142nd St. • Grandview, Missouri 64030 • Tel. (816) 878-6675 • Fax (816) 878-6683 • [www.smartflow-usa.com](http://www.smartflow-usa.com)

## Installation

The SWAP valve should be mounted to a suitable surface using the two standard angle mounting brackets that are mounted to the valve base. The mounting brackets may be moved to either end of the valve body for attachment to an available mounting surface.

1. *Line mounting to rigid water pipe in lieu of bracket mounting is discouraged.*
2. *If the mounting brackets are located on the valve body end, ensure that there is adequate clearance to move the valve handle.*

Connect water supply to the 1 or 2-inch NPT(F) Water Inlet.

Connect shop air to the 3/8-inch NPT(F) Air Inlet with either a permanent or quick-connect fitting.

Connect the 1 or 2-inch NPT(F) Air-Water Outlet to the cooling water Supply manifold.

Install the check valve (included) in the return water line downstream from the Return water manifold as shown in Figure 2. The check valve will prevent water from back-flowing into the mold after purging.

Depending on your installation, it may be desirable to add a check valve to the air inlet ahead of the SWAP Valve.


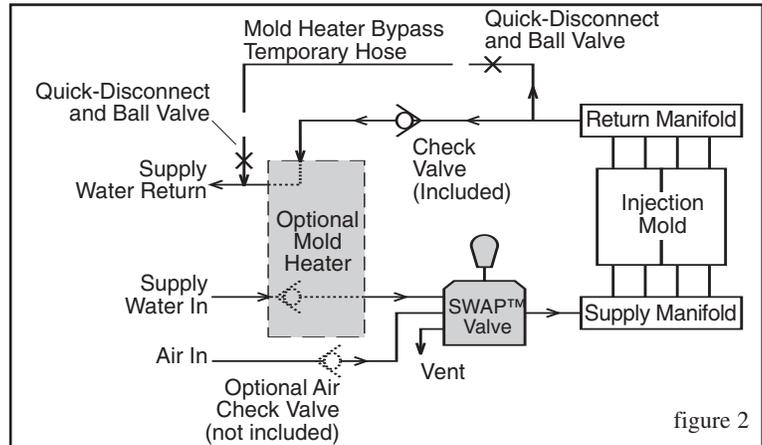


figure 2

## Dimensions

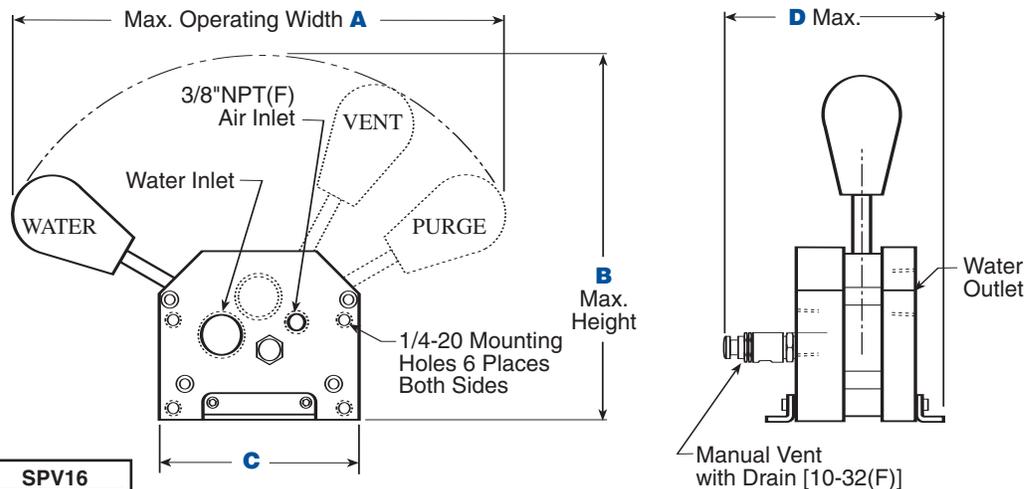

drawing not to scale


Linear =  $\frac{\text{mm}}{\text{inch}}$

figure 3

Dimension	SPV8	SPV16
<b>A</b>	295mm/11.6"	395mm/15.5"
<b>B</b>	221mm/8.7"	297mm/11.7"
<b>C</b>	119mm/4.7"	173mm/6.8"
<b>D</b>	130mm/5.1"	160mm/6.3"

## Operation

<b>For Normal Processing</b>	Select <b>WATER</b> . Cooling Water is available to the Supply manifold. Purge Air is blocked.
<b>To Evacuate Cooling Water</b> See Note Below	Select <b>PURGE</b> . Purge Air is available to the Supply manifold. Cooling Water is blocked.
<b>To Bleed-Off Trapped Pressure and Drain Residual Water</b>	Select <b>VENT</b> . Press Manual Vent-Drain Valve. Purge Air is blocked. Cooling Water is blocked.

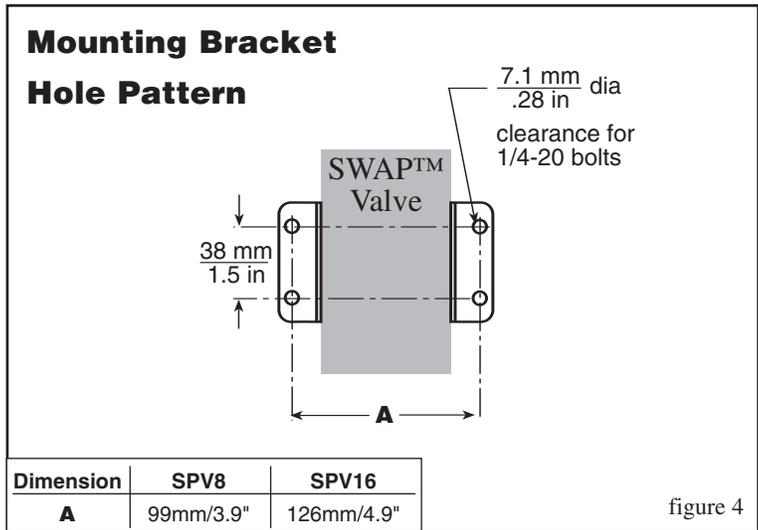

**Note:** It is possible for the majority of the purge air to rush through the unrestricted water passages, leaving some water in bubblers or baffles. After unrestricted mold passages have been purged, close valves on these passages so more air is available to purge the restricted water passages. It may be necessary to purge longer or to purge restricted passages individually to completely evacuate the water.

*Caution:* confirm that the SWAP valve is selected to VENT and that the manual vent button has been pressed to relieve trapped pressure or residual water before disconnecting any water lines. A drain tube can be connected to the Manual Vent-Drain and run to a suitable drain.

## Using a Smartflow Mold Temperature Regulator (MTR)

1. Stop the press.
2. Note the setting on the calibration scale, then move the knob to the “Flush” position (Clockwise to the stop).
3. Perform the SWAP Purge Procedure (see OPERATION above).
4. On the MTR, return the knob on the calibration scale to the previous position. (It will be necessary to rotate the knob more than one complete turn counterclockwise.)
5. Select Water after the new tool is hung and the cooling water connections are secure.

## Using a TCU (temperature control unit)

We recommend using a temporary bypass hose per figure 2, page 2. Install bypass hose and open ball valves on each end of the bypass before purging the mold. Your installation may vary.

1. Stop the press.
2. Check the TCU manufacturer’s instruction for Purge position or Bypass instructions.
3. Perform the SWAP Purge Procedure (see OPERATION above).
4. Reset the TCU to the original operating configuration.
5. Select Water after the new tool is hung and the cooling water connections are secure.

## Troubleshooting

Symptom	Corrective Action
Air or water does not flow through the system	<ul style="list-style-type: none"> <li>• Verify check valve direction</li> <li>• Check that the valve handle is in the correct position</li> </ul>
Water leaks from the valve while in operation	<ul style="list-style-type: none"> <li>• Replace O-Rings (Contact factory for repair or field replacement procedure)</li> </ul>
Mold does not evacuate completely	<ul style="list-style-type: none"> <li>• Check air pressure (80 to 125 psi required)</li> </ul>

## Replacement/Additional Parts

Description	SPV8 (1-inch)	SPV16 (2-inch)
O-Ring Set .....	PVOSET-100-A	PVOSET-200-A
Valve Handle Knob.....	PVKB-100	PVKB-100
Mounting Brackets (2 required per valve) .....	PVB-100	PVB-100
Air Check Valve 3/8" .....	PVCV-3	PVCV-3
Return Check Valve.....	PVCV-100	PVCV-200